


PETLIBRO PLWF005

Filter Replacement Guide

Dockstream Automatic Pet Water Fountain


PRODUCT OVERVIEW

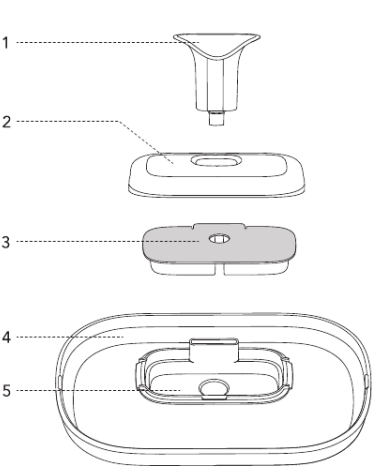

- 1. Spout
- 2. Filter Lid
- 3. Filter
- 4. Water Tray
- 5. Filter Tray

Note: Components 4 and 5 are integrated and cannot be detachable.

05

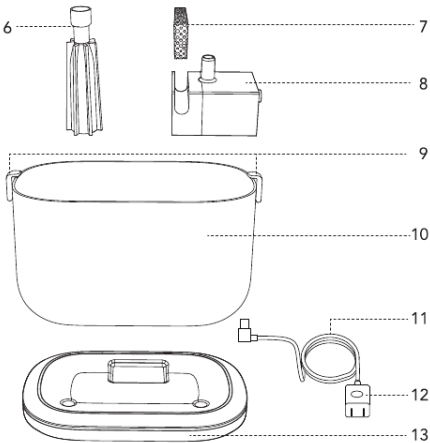

- 6. Water Pipe
- 7. Foam Filter
- 8. Wireless Water Pump
- 9. Snap Lids
- 10. Water Tank
- 11. Power Cord
- 12. Power Adapter
- 13. Tank Base

Note: Components 9 and 10 are integrated and cannot be detachable.

06

This model uses the Dockstream flat filter and pump foam filter shown in the manual.

Filter parts	Flat filter under the lid + foam pre-filter on the pump
Replace	At least once every 2 weeks
Prepare	Soak the new flat filter for 5 minutes and rinse thoroughly

Before You Start

1. Turn the fountain off and disconnect it from power.
2. Remove the tank from the base and pour out the water if needed.
3. Soak the new flat filter in a clean bowl for 5 minutes, then rinse it thoroughly under tap water.


Do not soak the new filter directly in the fountain tank.

HOW TO USE

1. Soak the filter in a clean bowl for 5 minutes, then rinse the filter thoroughly with tap water.


Notes:

- 1) The filter must be fully soaked before the fountain is turned on; otherwise, the water may not flow through the filter smoothly and cause spillage.
- 2) Do not soak the filter in the water tank of the fountain in case of any surface dust.

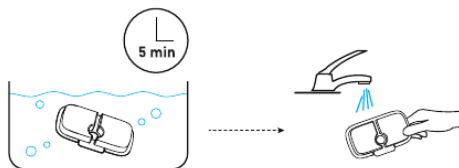


2. Insert the foam filter into the groove of the water pump. Position the pump according to the bottom slot shape.

Note: Please pay attention to aligning the recessed part of the pump with the protruding part of the water tank, otherwise the pump cannot be installed firmly.

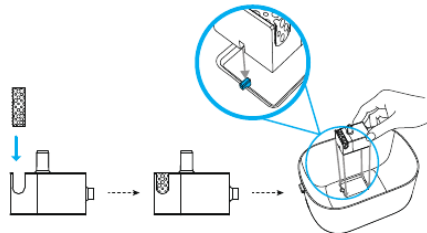


07

3. Install the silicone pipe on the pump. Add water to the tank.

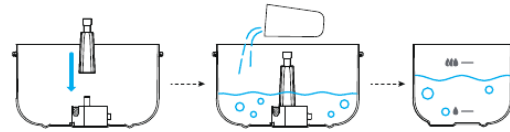


4. Install the water tray and fasten the snap lids.

Note: Pass the water pipe through the hole of the water tray, and the snap lids of the water tray need to be fastened, otherwise it will loosen.

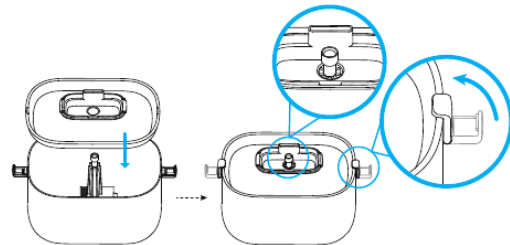

5. Install the soaked filter.

Note: Please make sure the hole of the water pipe passes through the hole of the filter.

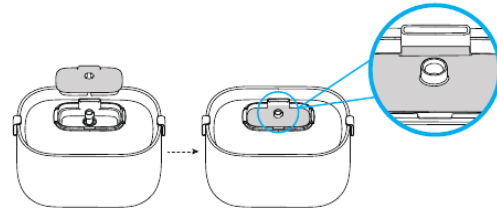

08

How to Replace the Filters

Step 1. Remove the top parts

Lift off the spout if installed, then remove the filter lid and water tray.

Step 2. Replace the foam filter

Pull the old foam filter off the pump. Fit the new foam filter into the pump groove and make sure it sits securely.

Step 3. Replace the flat filter

Remove the used flat filter. Place the soaked and rinsed new filter into the tray, aligning its opening with the water pipe.

Step 4. Reassemble


Reinstall the water tray and snap lids. The water pipe must pass through the tray and filter openings. Refit the lid and spout if used.

HOW TO USE

1. Soak the filter in a clean bowl for 5 minutes, then rinse the filter thoroughly with tap water.


Notes:

- 1) The filter must be fully soaked before the fountain is turned on; otherwise, the water may not flow through the filter smoothly and cause spillage.
- 2) Do not soak the filter in the water tank of the fountain in case of any surface dust.

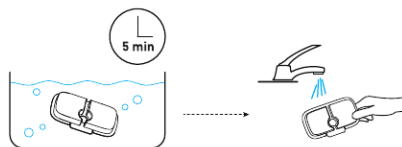


2. Insert the foam filter into the groove of the water pump. Position the pump according to the bottom slot shape.

Note: Please pay attention to aligning the recessed part of the pump with the protruding part of the water tank, otherwise the pump cannot be installed firmly.

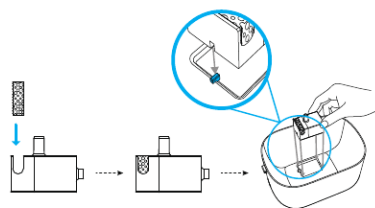


07

3. Install the silicone pipe on the pump. Add water to the tank.

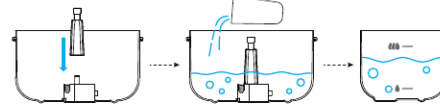


4. Install the water tray and fasten the snap lids.

Note: Pass the water pipe through the hole of the water tray, and the snap lids of the water tray need to be fastened, otherwise it will loosen.

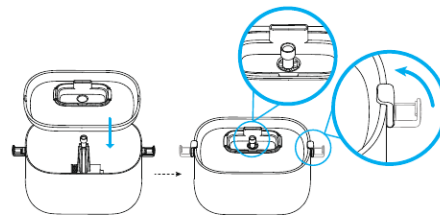

5. Install the soaked filter.

Note: Please make sure the hole of the water pipe passes through the hole of the filter.

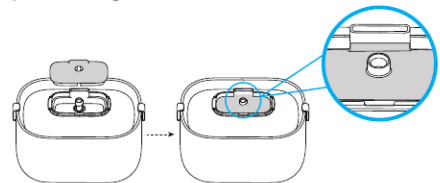



08

Restart and Check


Add water to the tank, place it back on the base, reconnect power, and switch the fountain on.

Confirm that water flows smoothly and the tray, lid, and tank are seated correctly.


6. Install the filter lid. Whether to install the spout depends on your pet's drinking preference.

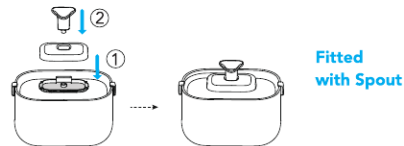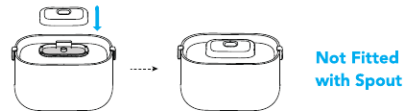

7. Connect the power adapter.

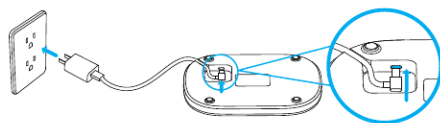

8. Install the water tank with the tank base by aligning the protruding hole of the water tank with the tank base.

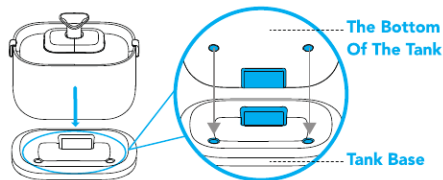

09

CARE INSTRUCTIONS


1. Replace the filter and the foam filter at least once every 2 weeks.
2. Clean the pump and fountain at least once every 2 weeks.

How to clean the pump


1. Remove the foam filter, pump cover and impeller cover in sequence.

Note:

The foam filter affects the water yield very much, so please clean it frequently and replace it in time when cleaning the pump.

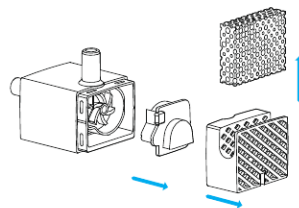

2. Remove the impeller by the brush hook.

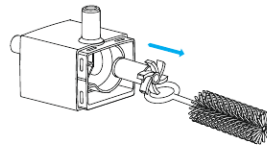

10

Care Reminder

Replace the flat filter and foam filter at least once every 2 weeks. Clean the pump and fountain at least once every 2 weeks. Heavy use or multiple cats may require more frequent filter changes.