


PETLIBRO Dockstream

Filter Replacement Guide

English quick guide with pictures

For compatible Dockstream fountains: PLWF106 / PLWF116 / PLWF115 / PLWF105 / PLWF005

PRODUCT OVERVIEW

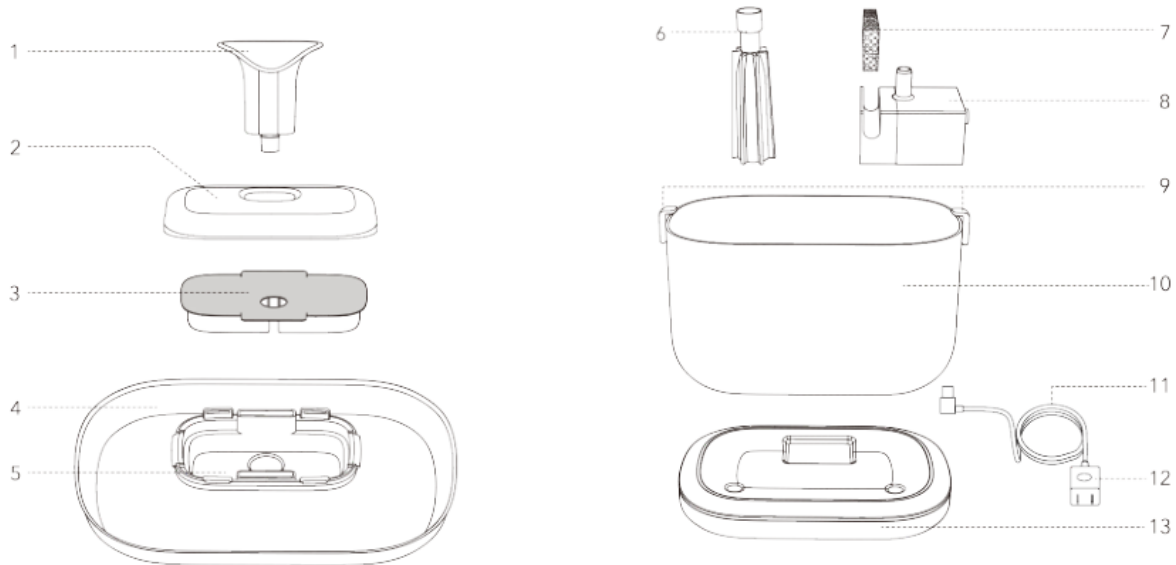

- 1. Spout
- 2. Filter Lid
- 3. Filter
- 4. Stainless Steel Water Tray
- 5. Filter Tray

Note: Components 4 and 5 are integrated and cannot be detachable.

- 6. Water Pipe
- 7. Foam Filter
- 8. Wireless Water Pump
- 9. Snap Lids
- 10. Water Tank
- 11. Power Cord
- 12. Power Adapter
- 13. Tank Base

Note: Components 9 and 10 are integrated and cannot be detachable.

This guide is based on the PETLIBRO replacement filter listing and the PLWF115 user manual. The general filter replacement process is the same across the compatible Dockstream models above, but the exact appearance of some parts may vary slightly by model.

Main filter	Flat replacement filter installed under the filter lid
Foam filter	Small foam pre-filter fitted onto the pump
Recommended interval	Replace the main filter and foam filter at least once every 2 weeks

Before You Start


- Turn the fountain off before changing the filter.
- Remove the water tank from the base and pour out the water if needed.
- Use a clean bowl to soak the new flat filter for 5 minutes, then rinse it thoroughly under tap water.
- Do not soak the new filter directly in the fountain tank. This helps avoid introducing loose dust into the fountain.

HOW TO USE

1. Soak the filter in a clean bowl for 5 minutes, then rinse the filter thoroughly with tap water.

Notes:

- 1) The filter must be fully soaked before the fountain is turned on; otherwise, the water may not flow through the filter smoothly and cause spillage.
- 2) Do not soak the filter in the water tank of the fountain in case of any surface dust.

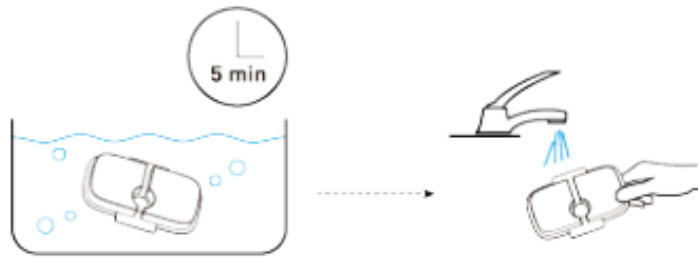


Tip: If your fountain is heavily used or you have multiple cats, you may need to change the filters more often.

Parts Involved in Filter Replacement


The parts you will work with are: the filter lid, the flat filter, the filter tray, the foam filter, the pump, the water pipe, and the spout (if your fountain is fitted with it).

PRODUCT OVERVIEW

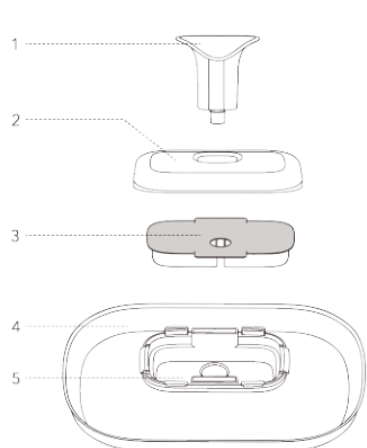

- | | |
|---------------|-------------------------------|
| 1. Spout | 4. Stainless Steel Water Tray |
| 2. Filter Lid | 5. Filter Tray |
| 3. Filter | |

Note: Components 4 and 5 are integrated and cannot be detachable.

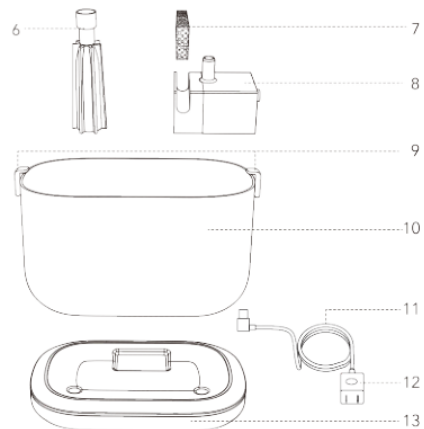


- | | |
|------------------------|-------------------|
| 6. Water Pipe | 10. Water Tank |
| 7. Foam Filter | 11. Power Cord |
| 8. Wireless Water Pump | 12. Power Adapter |
| 9. Snap Lids | 13. Tank Base |

Note: Components 9 and 10 are integrated and cannot be detachable.

How to Replace the Filter

Step 1. Remove the lid and access the old filter

Lift off the top lid. If your fountain uses the optional spout, remove the spout first. Then remove the filter lid to access the flat filter underneath.

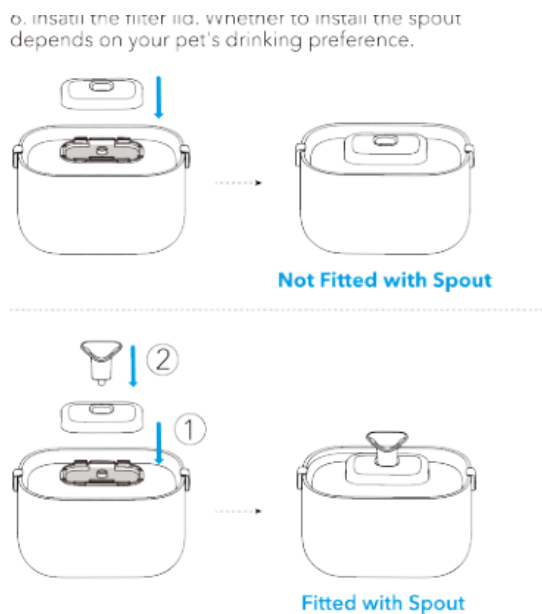

7. Power the water fountain.

Step 2. Remove the old flat filter


Lift out the used flat filter from the filter tray. Dispose of the old filter. If there is visible debris in the tray, rinse the tray before installing the new filter.

Step 3. Replace the foam filter on the pump

Pull the old foam filter off the pump and fit the new foam filter into the groove on the pump. Make sure it sits flush. When placing the pump back into position, align the pump correctly with the slot in the tank.

shape.

Note: Please pay attention to aligning the recessed part of the pump with the protruding part of the water tank, otherwise the pump cannot be installed firmly.

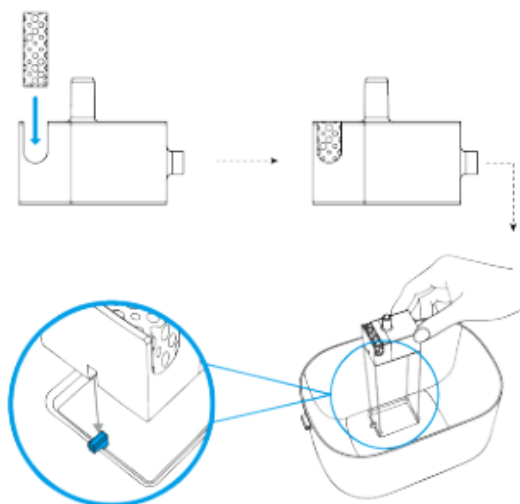

3. Install the silicone pipe on the pump. Add water to the tank.


Step 4. Install the new flat filter

Place the soaked and rinsed flat filter back into the filter area under the lid. Make sure the filter lies flat and the hole in the filter lines up with the water pipe.


Step 5. Reassemble the tray and water pipe correctly

Reinstall the water tray and fasten the snap lids. The water pipe must pass through the hole in the water tray and through the hole in the filter. If the tray is loose or the pipe is not aligned, water flow may be affected.

Note: Pass the water pipe through the hole of the water tray, and the snap lids of the water tray need to be fastened, otherwise it will loosen.

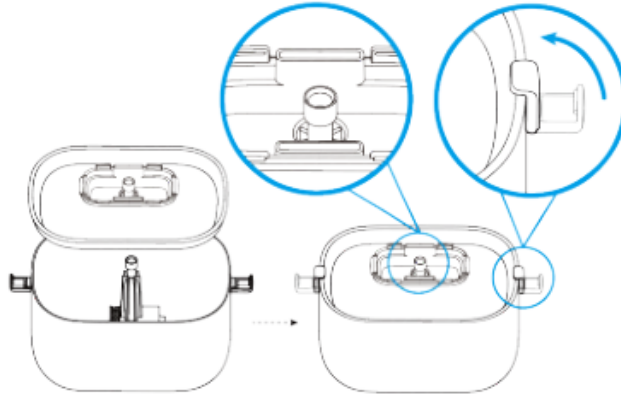



Note: Please make sure the hole of the water pipe passes through the hole of the filter.

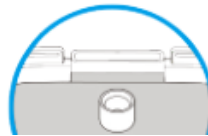

Step 6. Put the lid back on

Reinstall the filter lid. If you use the spout, fit it back into place. If you do not use the spout, simply leave the lid in the non-spout configuration.

6. Install the filter lid. Whether to install the spout depends on your pet's drinking preference.

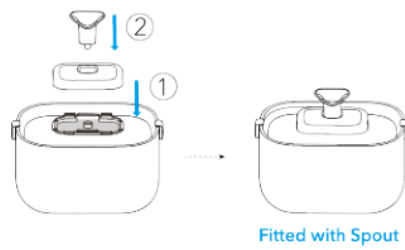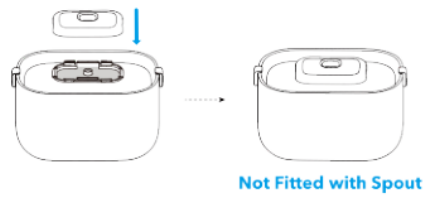


7. Power the water fountain


Step 7. Refill and restart the fountain

Add water to the tank if needed, place the tank back onto the base, and switch the fountain on. After restarting, check that the water is flowing smoothly.


② Turn on the power switch of the base.

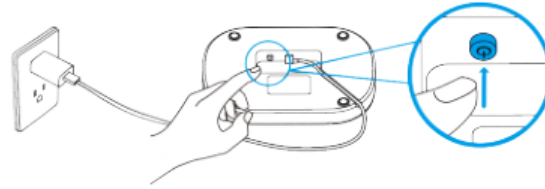

2) During Battery-operated use: turn on the power switch of the base directly.

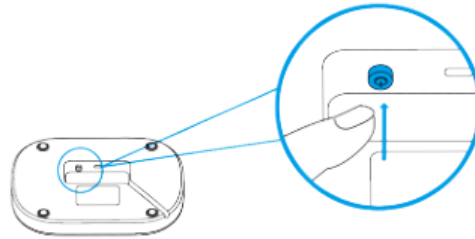

8. Install the water tank with the tank base by aligning the protruding hole of the water tank with the tank base.

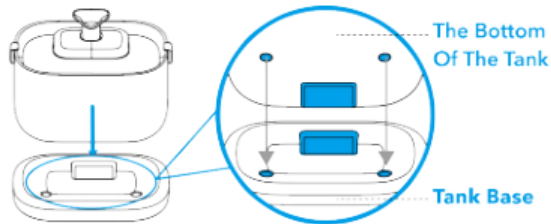

Quick Check After Replacement

- The filter is fully seated and lying flat.
- The water pipe passes through the filter opening correctly.
- The tray is snapped in securely.
- The tank is aligned with the base.
- Water flows normally after powering on.

Quick Pump Cleaning (Optional but Recommended)

When you change the filter, it is also a good time to clean the pump.

- Remove the foam filter, the pump cover, and the impeller cover.
- Use the small brush to remove dirt from the pump parts.
- Rinse the parts with clean water and reassemble the pump.


1. Replace the filter and the foam filter at least once every 2 weeks.
2. Clean the pump and fountain at least once every 2 weeks.

How to clean the pump


1. Remove the foam filter, pump cover and impeller cover in sequence.

Note:

The foam filter affects the water yield very much, so please clean it frequently and replace it in time when cleaning the pump.

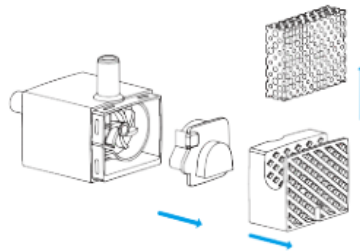

2. Remove the impeller by the brush hook.

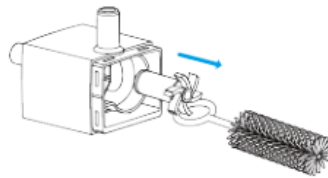

Replacement Schedule

PETLIBRO recommends replacing the flat filter and the foam filter at least once every 2 weeks, and cleaning the pump and fountain at least once every 2 weeks.

Important Note

This instruction sheet was prepared from the PLWF115 user manual and the PETLIBRO Dockstream replacement filter product listing. Compatible models may have small design differences, but the replacement logic is the same: soak and rinse the new flat filter, replace both the flat filter and foam filter, reassemble carefully, and confirm proper water flow after restarting.