


PETLIBRO Dockstream 2

PLWF116 Filter Replacement Guide

English quick guide with pictures
For model PLWF116 only

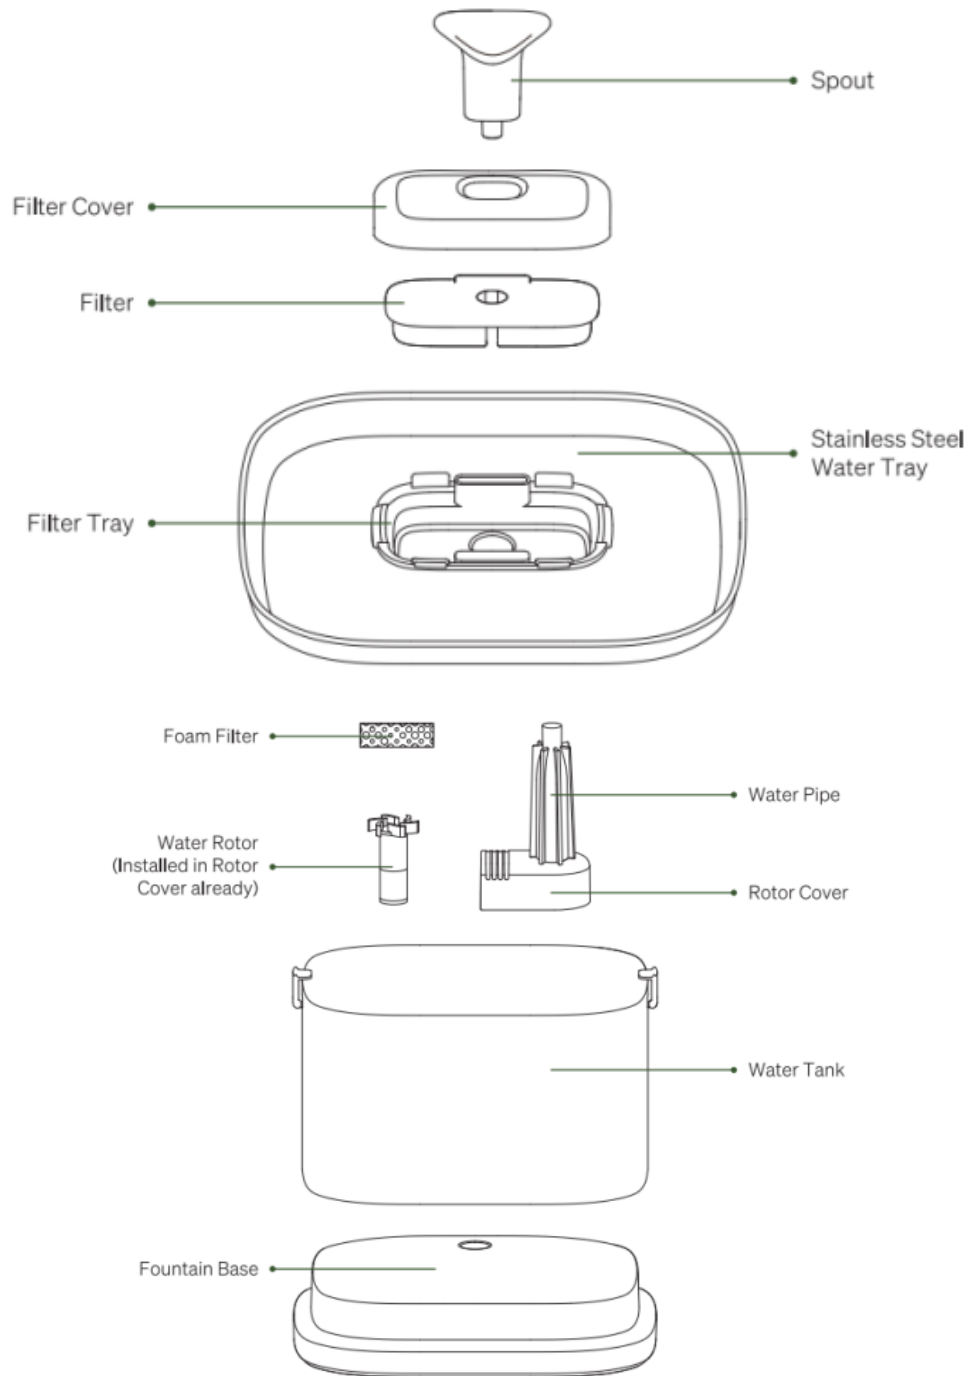


This guide is prepared for the PETLIBRO Dockstream 2 Smart Cordless Fountain, model PLWF116. The Dockstream replacement filter kit sold for PLWF116 includes both the flat replacement filters and the replacement pre-filter sponge (foam filter).

Model	PLWF116
Main filter	Flat Dockstream replacement filter under the filter cover
Pre-filter	Foam filter / pre-filter sponge
Good to know	The stainless steel water tray and filter tray are integrated and cannot be detached.

Before You Start

- Turn the fountain off and remove the tank from the base.
- Discard the used water and rinse the tank parts before installing a new filter.
- Soak the new flat filter in tap water for 5 minutes, then rinse it thoroughly.
- Keep the filter tray and stainless steel water tray together — they are integrated and are not meant to be separated.

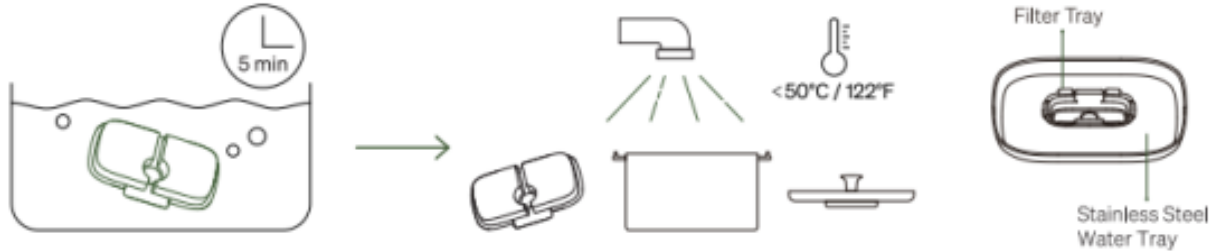

Note: The manual also says to rinse all tank parts before reassembly.


How to Replace the Filter

Step 1. Remove the old main filter

Take off the spout if installed, lift the filter cover, and remove the used flat filter from the tray area.


Step 2. Replace the foam filter (pre-filter sponge)

If your replacement kit includes a new pre-filter sponge, remove the old foam filter from the pump/rotor cover area and install the new one in the same position.

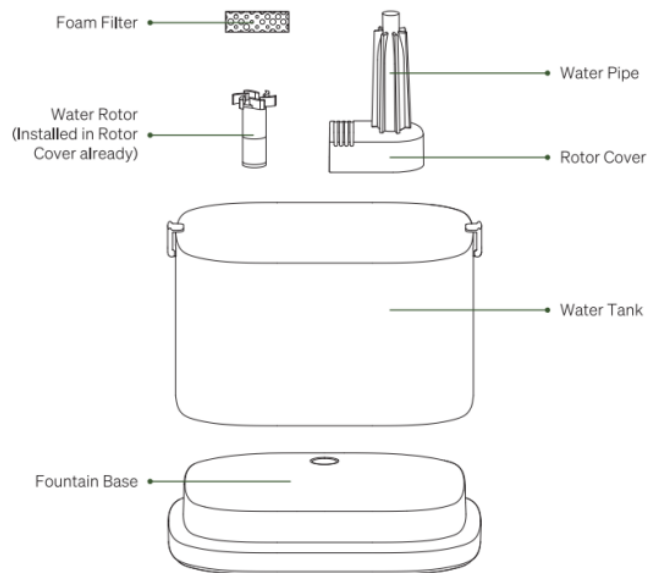


Step 3. Put the water pipe back into the tank

Place the water pipe inside the water tank and make sure it is seated correctly.

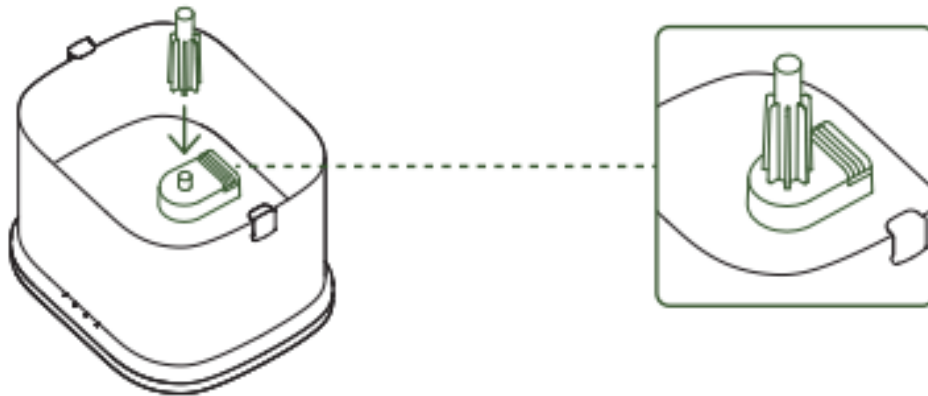

Step 4. Install the new filter and close the cover

Attach the soaked filter and install the filter lid / filter cover. Make sure the filter sits flat and is properly aligned.

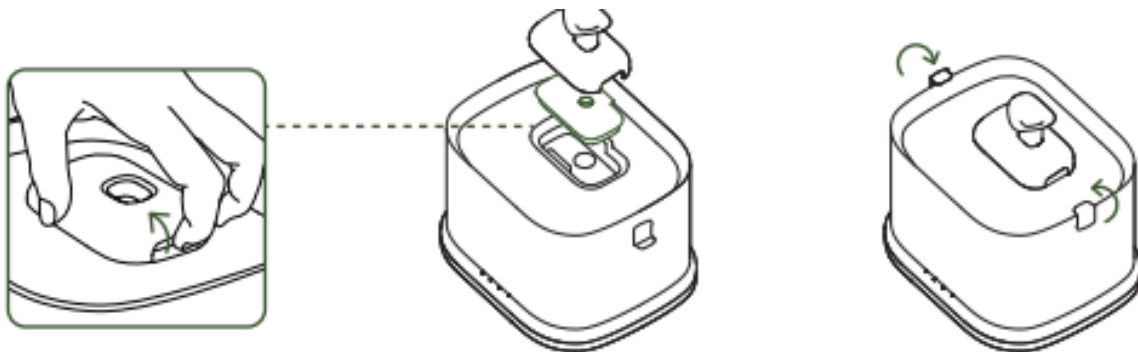


Step 5. Fill the tank and snap the lid in place

Fill the tank with water, install the water tray assembly, and snap the lid in place securely.


Step 6. If using wired mode, route the power cable correctly

When using PLWF116 in wired mode, route the power cable through one of the cable slots on the bottom of the fountain. This helps the fountain monitor the water level accurately.

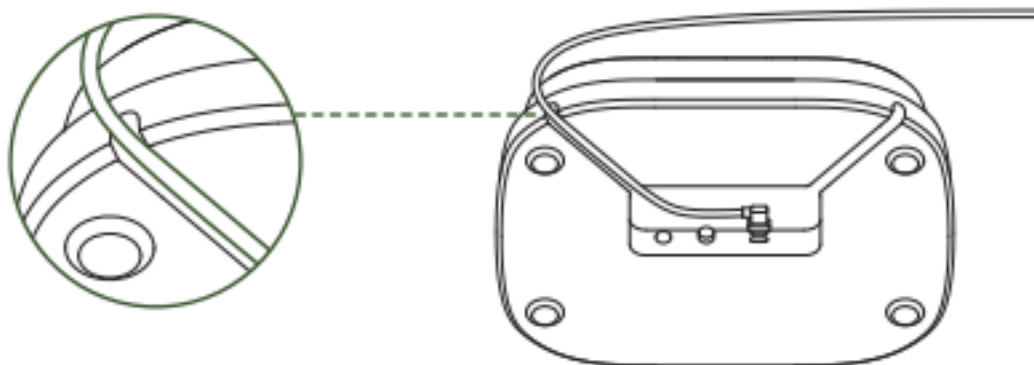

Step 7. Restart the fountain and check water flow


Turn the fountain on and confirm that water flows normally. If the filter or cover is not seated correctly, remove it and reinstall it carefully.

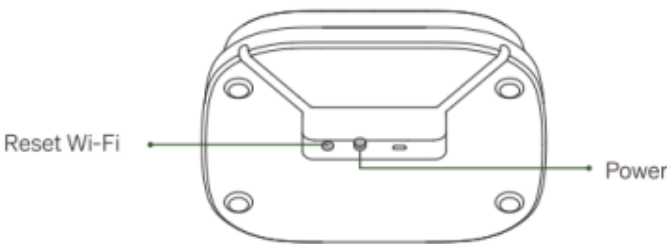

Button	How to use
 Power	Press to turn the power on or off.
 Reset Wi-Fi	Press and hold for 3 seconds to reset Wi-Fi settings. The fountain will enter network configuration mode.

Indicator Reminder

The PLWF116 uses status lights on the base. The filter replacement indicator turns red and steady when the filter should be replaced (14 days or more).

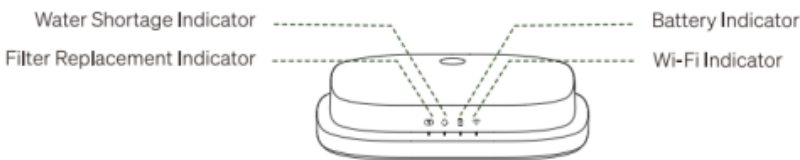

Light	Light Status	Equipment Status
Wi-Fi Indicator	White and blinking	Bluetooth pairing; trying to connect to Wi-Fi; OTA in progress
	White and steady (60s --> off)	Connected and running normally
	Red and blinking	Network error
Filter Replacement Indicator	Red and steady	Replace filter (≥ 14 days)
Water-Shortage Indicator	Orange and steady	Low water (650mL-1100mL)
	Red and steady	No water (<650mL); Tank detached
Battery Indicator	Adapter power supply mode: Battery ≤ 10%, Red and blinking; Battery 11-99%, white and blinking; Battery 100%, white and steady	
	Battery mode: Battery ≤ 10%, red and steady; Battery 11-100%, off	

Care Tips

- Replace the main filter regularly and replace the foam pre-filter when needed.
- Rinse the tank parts during filter changes to help maintain water flow.
- If you use the fountain in wired mode, keep the power cable in the bottom cable slot.

- If the fountain does not flow correctly after replacement, check that the filter, cover, and water pipe are seated correctly.

Source note: This guide is based on the available PLWF116 user manual page and the Dockstream replacement filter compatibility listing.